


IMPORTANT: This kit requires either a Polaris or WARN winch mount to be installed. It cannot be mounted if a winch mount has not been installed on the vehicle

III. PARTS LIST

Ref	Description	Qty
1	Plow Mount	1
2	M10-1.50 x 25mm Hex Bolts	4
3	Flat Washer 3/8"	2
4	Capscrew M8-1.25 x 20mm	2
5	Plow Retaining Pin	2
6	Plow Tab RH	1
7	Plow Tab LH	1
8	WARN Winch Mount Adapter Brkt.	1
9	Lock Washer M10	2
10	Nut M10x1.50	

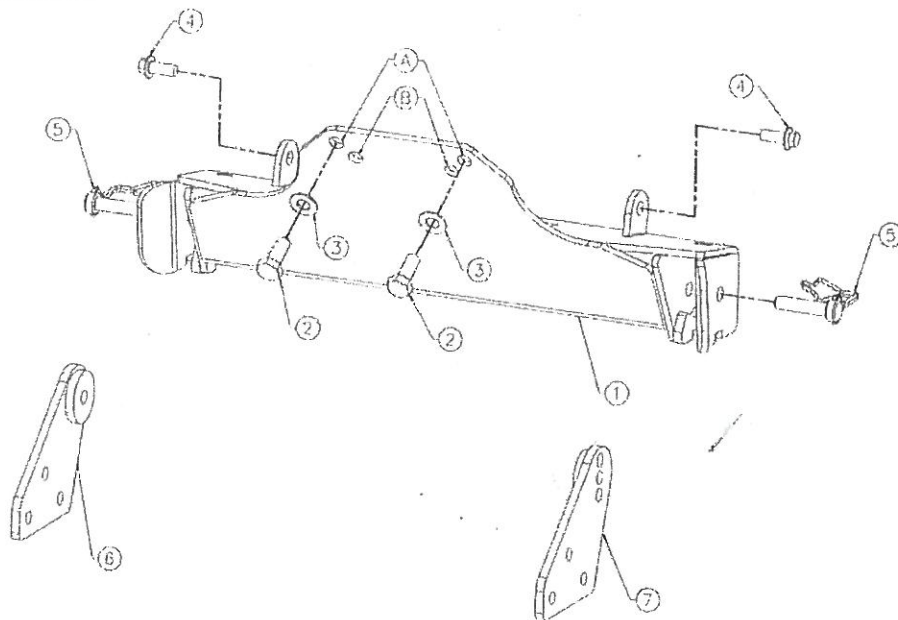

Use Holes (A) if mounted with a Polaris Brand Winch Mount.
Use Holes (B) if mounted with a WARN Brand Winch Mount.

